


App install instructions


1. Download the Garo GEV App on the owners phone and create account
2. Click Add New Device. The App must be given all permissions to search on Wi-Fi and Bluetooth
3. Enter the home owners 2.5ghz WIFI networks SSID and password
4. Select charging mode (Manual/scheduled/Eco)
5. Set the dynamic load balancing (DLB) in the settings

* If you need your own device to set up the App, the owner can connect their phone by holding the side button for 10 seconds and following steps 2 to 3 above.

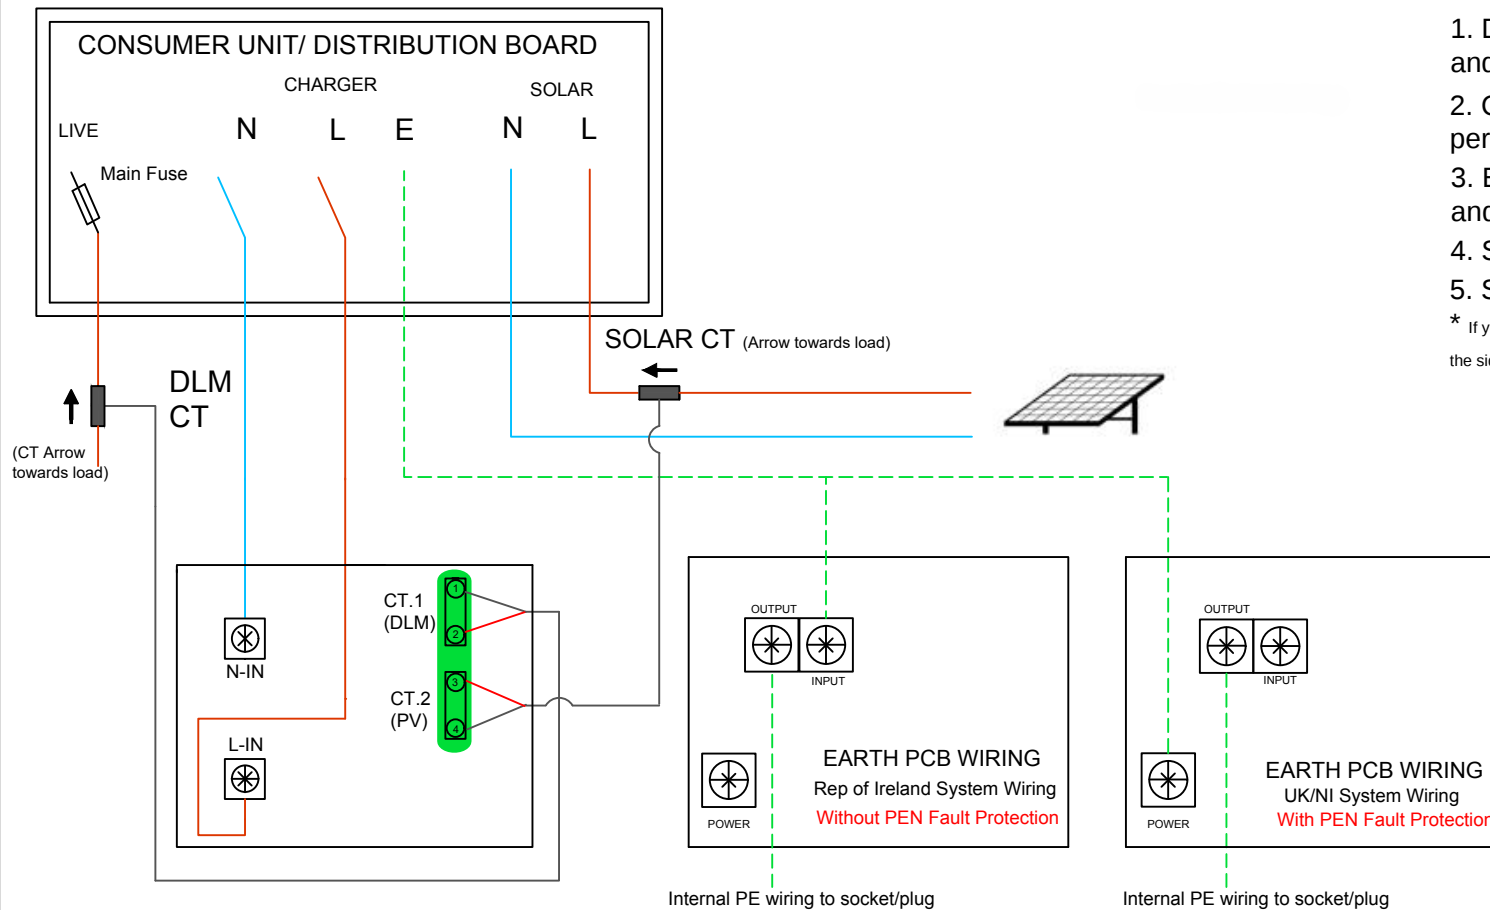

Dip Switch Settings

DIP SWITCH	FUNCTION	ON POSITION	OFF POSITION	RESULT
1	POWER LIMIT	 32A 16A		On position gives full power from the unit. (32A) Off position limits charger to 16A.
3	EARTH CHECK	 3	 3	On position the charger does an internal check for earth. Off position this function is turned off.
4	DLM CT CHECK	 4	 4	In on position the charger checks that DLM CT is present. If CT is missing the charging is reduced to 6A Off position to be used when no DLM CT is installed.

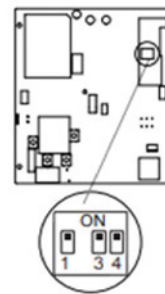

* Randomised Delay

The unit comes with a randomised delay function, meaning charging will begin after a random duration of between 1 and 600 seconds.

To disable randomised delay, press the reset button on the side 5 times quickly.

						=	PROJECT Wiring Guide for GEV 7.4	 Unit 19 / 307 Northwest Business park Ballycoolin Dublin 15	DRAWING No.	SHEET
						+			GEV 7.4	-1
NO	DESCRIPTION	DATE	NAME	CHECK	APPD				PROJECT No	